




# Disassembling Nokia 2366i Main Display

Written By: Michael Machado

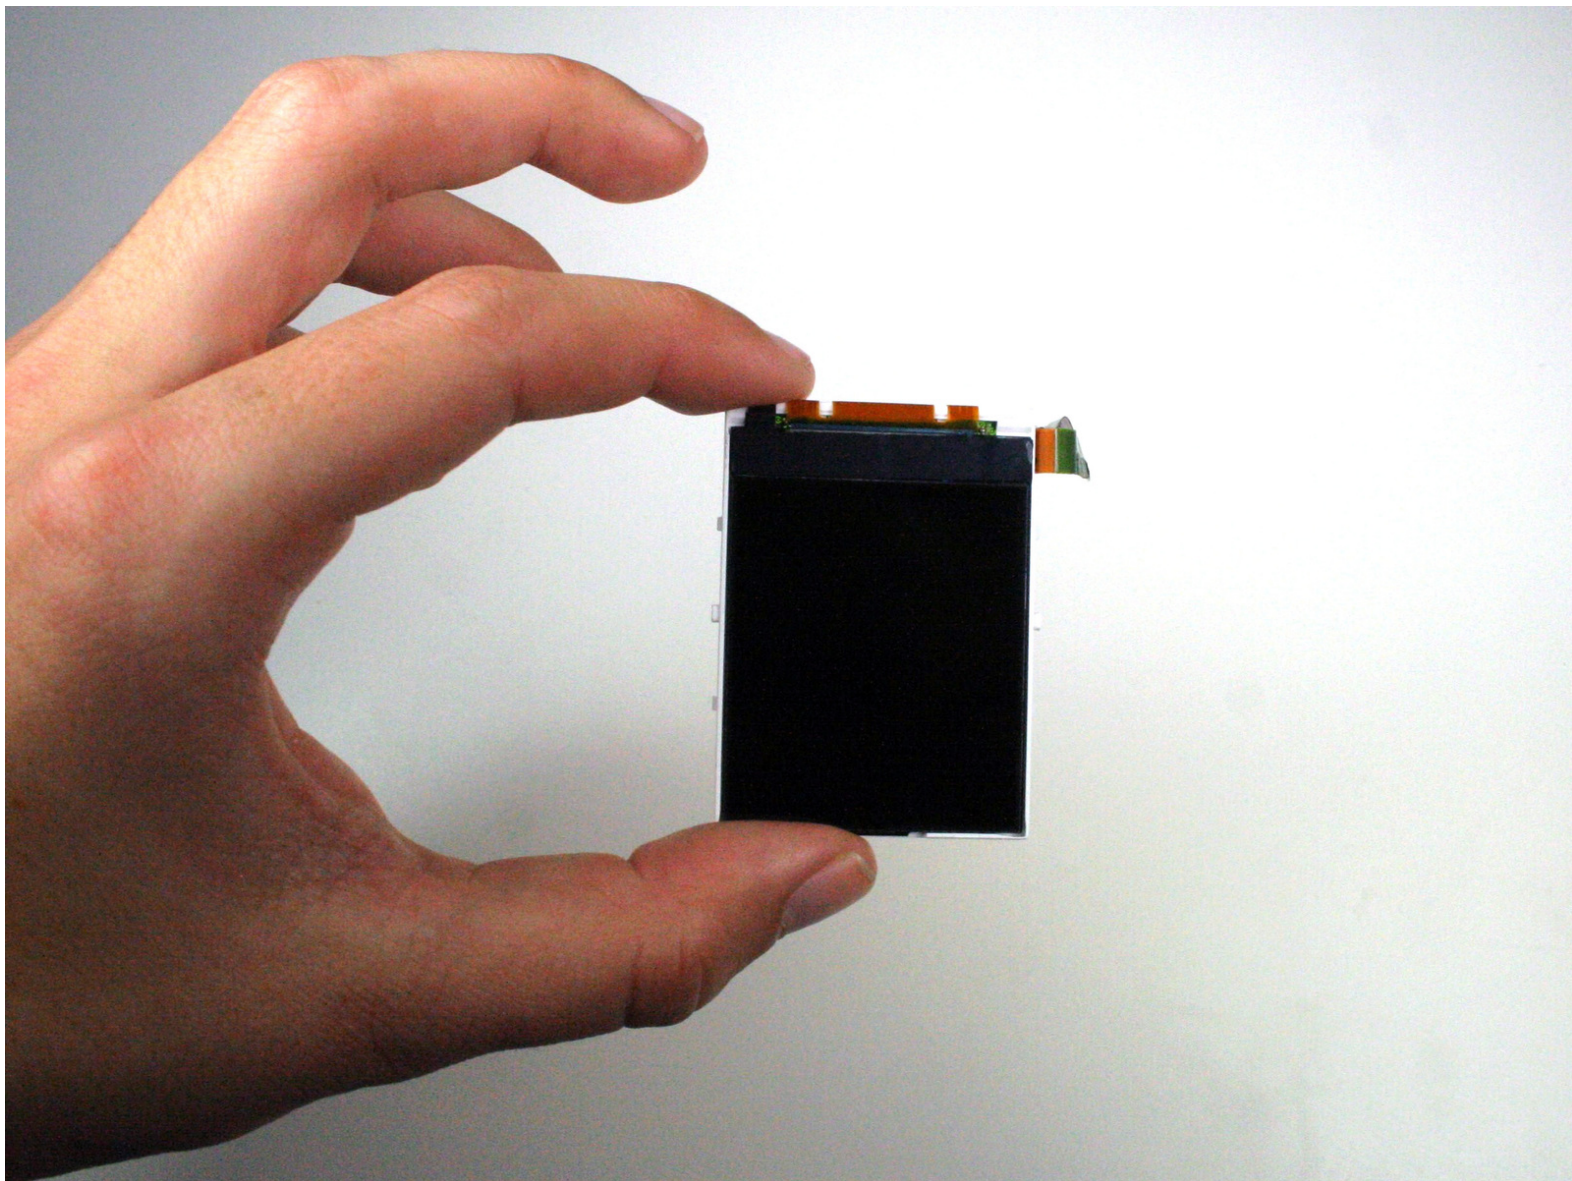

## INTRODUCTION

### Removing the Main Display

---



#### TOOLS:

- [Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-



## Step 1 — Battery



- Turn off the phone.
- ⓘ Position the phone so that the back side is in view.

## Step 2



- Apply pressure on the cover while simultaneously sliding the cover downward.
- Remove the back battery cover.

## Step 3



- Insert the spudger between the base of the phone and the phone battery.
- Position the phone so that the battery won't fall out of the phone.
- Carefully lift the battery out of the phone.
- ❗ The battery lifts out of the phone easily.

## Step 4 — Front Cover



- Keep the phone closed.
- ❗ Hold the phones sideways with the front cover of the phone facing up.



## Step 5



- Find the slight crease on the side that divides the display assembly in half.
  - Slowly wedge the spudger into the crease.
- ⚠ It's a little difficult to perform this step because the crease is narrow. Do not rush because you may damage the phone

## Step 6



- Run the spudger all along the crease while lifting up.
- Separate the front cover from the front base.


## Step 7 — Main Display



- Remove the four 5mm screws on the metal casing using the T6 Torx screwdriver.



## Step 8

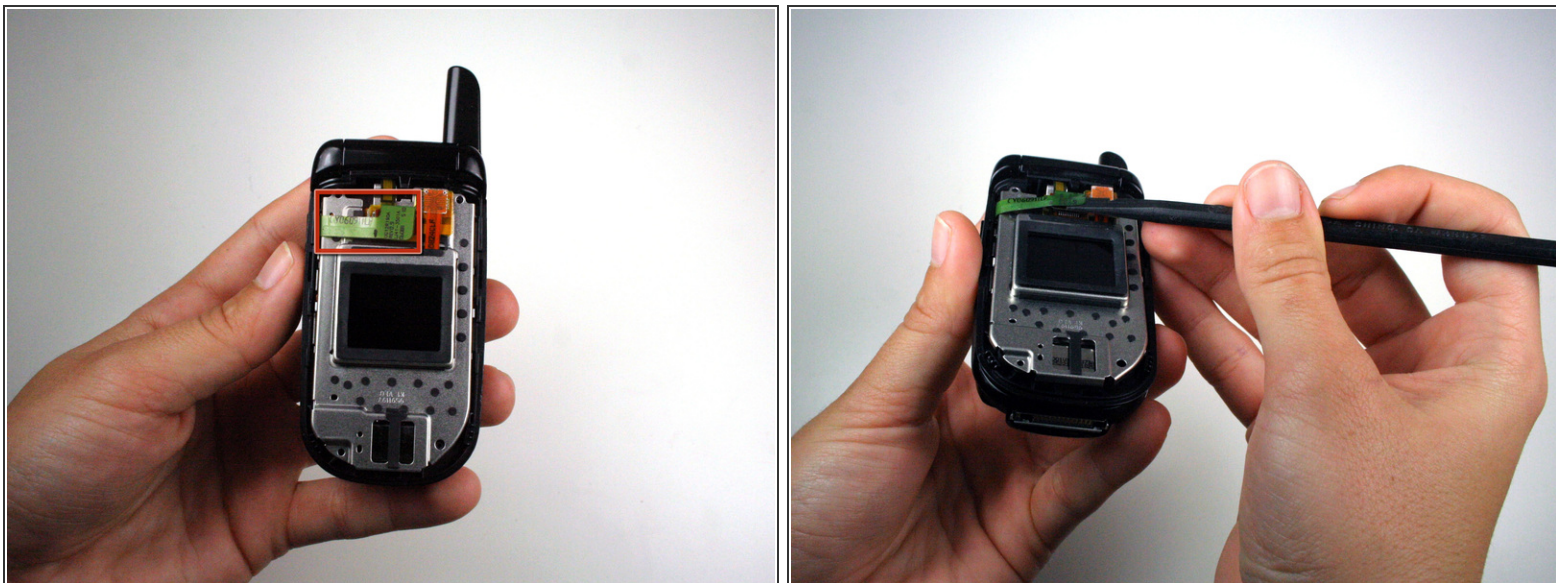

- Using the spudger, disconnect the green display cable.

## Step 9



- Lift the metal casing.
  - ⚠ Be careful not to pull the casing too hard because it is still attached to the phone by a wire.
- Remove the main display from under the metal casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 10:09:55 AM.